



























































 







Original	Recharge
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV/SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Zoom	 Zoom / Size
 List	 Smart / List
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Timer	 Sleep / Timer
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Display / Media
 Mute	 Mute / Dimmer

Original	Recharge
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Recall	 Back / Return
 P+	 >> / Preset+
 P-	 << / Preset-
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4






 
































 





























Original	Rechange
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Original	Rechange
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media





















































Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--





Original	Recharge	Original	Recharge
Power	 Power	Power	 Power
Mute	 Mute / Dimmer	Mute / Dimmer	 Mute / Dimmer
Pause	 Pause / Step / Freeze	Pause / Step / Freeze	 Pause / Step / Freeze
Audio	 Audio / Lang I/II	Audio / Lang I/II	 Audio / Lang I/II
Zoom	 Zoom / Size	Zoom / Size	 Zoom / Size
Timer	 Sleep / Timer	Sleep / Timer	 Sleep / Timer
Tv/Radio	 TV/Radio /	TV/Radio /	 TV/Radio /
Text	 Text / Goto	Text / Goto	 Text / Goto
Tv/SAT	 AV / Input / RDS	AV / Input / RDS	 AV / Input / RDS
Menu	 Menu / Home	Menu / Home	 Menu / Home
Up/CH+	 Up	Up	 Up
Info	 Info / Angle	Info / Angle	 Info / Angle
Left	 Left	Left	 Left
OK	 OK	OK	 OK
Right	 Right	Right	 Right
Exit	 Exit / Cancel / Clear	Exit / Cancel / Clear	 Exit / Cancel / Clear
Down/CH-	 Down	Down	 Down

Original	Recharge	Original	Recharge
Recall	 Back / Return	Back / Return	 Back / Return
Vol+	 Vol+	Vol+	 Vol+
List	 Smart / List	Smart / List	 Smart / List
P+	 CH+ / Page+	CH+ / Page+	 CH+ / Page+
Vol-	 Vol-	Vol-	 Vol-
M/P	 Display / Media	Display / Media	 Display / Media
P-	 CH- / Page-	CH- / Page-	 CH- / Page-
1	 1	1	 1
2	 2	2	 2
3	 3	3	 3
4	 4	4	 4
5	 5	5	 5
6	 6	6	 6
7	 7	7	 7
8	 8	8	 8
9	 9	9	 9
EPG	 Guide / EPG / -/-	Guide / EPG / -/-	 Guide / EPG / -/-



