



 


 
 


 
 



 


 

 
 






 






 





 
 




 




 











 

 



 

 

 



 
 





Original	Recharge	Original	Recharge
 Power	 Power	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Guide	 Guide
 3	 3	 Rec List	 List
 4	 4	 Source	 AV
 5	 5	 *	 Menu
 6	 6	 Back	 Back
 7	 7	 Home	 Smart
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+] / [?]	 Info	 Left	 Left
 [≡]	 Text	 OK	 Ok
 Google Play	 Media	 Vol+	 Vol +
 Netflix	 Shift + Media	 Vol-	 Vol -
 Red	 Red	 Mute	 Mute
 Green	 Green	 Tv	 TV/R





	Original	Rechange	Original	Rechange
	Recall	 Pre Ch		
	CH+	 Ch +		
	CH-	 Ch -		
	Audio	 Dual		
	[...]	 Subt		
	Help	 Options		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	Rec	 Rec		
	Pause	 Pause		
	Exit	 Exit		

