 



 


 



 



 

 
 
 
 

 
 
 

 




 

 




 

 



 




 
 
 
 

 
 

 

 



 


 





Original		Rechange		Original		Rechange	
	Power		Power		Prog+		Ch +
	Input		AV		Prog-		Ch -
	1		1		Media		Media
	2		2		Exit		Exit
	3		3		Tv/Radio		TV/R
	4		4		Digital/Analog		Eject
	5		5		OK		Ok
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Sync Menu		Menu
	[≡]/Text		Text		Guide		Guide
	[+]		Format		?/i-Manual		D. Menu
	Mute		Mute		Home		Smart
	Vol+		Vol +		Options		Options
	Vol-		Vol -		Return/Back		Back





Original		Recharge		Original	Recharge
	[i+]		Info		
	SEN		Pre Ch		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		
	Play		Play		
	>>		>>		
	<<		<<		
	Title List		List		
	Tv Pause		3D		
	[...]		Subt		
	Audio		Dual		
	X/Related Search		Sleep		

