



 



 







 



 







 



 

 

 



 



 







 



 















Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Audio		Audio / Lang I/II		Last		Back / Return
	Mute		Mute / Dimmer		Menu		Menu / Home
	Tv/R		TV/Radio /		Exit		Exit / Cancel / Clear
	Sub-T		Subtitle / EQ		Up		Up
	EPG		Guide / EPG / -/--		CH+		CH+ / Page+
	Text		Text / Goto		Vol-		Vol-
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Vol+		Vol+
	5		5		Info		Info / Angle
	6		6		CH-		CH- / Page-
	7		7		Down		Down
	8		8		Mode		Smart / List
	9		9		PVR		Display / Media
	Favor		Fav / Marker / PC		USB		Shift + 8





Original	Recharge	Original	Recharge
	Play / Slow		
	Pause / Step / Freeze		
	Red / Netflix / Search		
	I<< / Preset-		
	Yellow / YouTube / Repeat		
	>>I / Preset+		
	Stop / Hold		
	Green / APP / Repeat		
	<< / Tune-		
	>> / Tune+		
	Blue / Prime Video / Random		
	Rec / Rec Mode		

