













 



 











 
 
 

 




 
 


 






 

 



















| Original  |             | Rechange  |                   | Original  |                 | Rechange  |                             |
|---|-------------|---|-------------------|---|-----------------|---|-----------------------------|
|    | Power       |    | Power             |    | S-Mode          |    | Sound / Title               |
|    | Source      |    | AV / Input / RDS  |    | Nicam / Audio   |    | Audio / Lang I/II           |
|    | Sleep       |    | Sleep / Timer     |    | Up              |    | Up                          |
|    | Mute        |    | Mute / Dimmer     |    | Left            |    | Left                        |
|    | 1           |    | 1                 |    | Enter           |    | OK                          |
|    | 2           |    | 2                 |    | Right           |    | Right                       |
|    | 3           |    | 3                 |    | Down            |    | Down                        |
|    | 4           |    | 4                 |    | Red / Program   |    | Red / Netflix / Search      |
|    | 5           |    | 5                 |    | Red / Program   |    | TV/Radio /                  |
|    | 6           |    | 6                 |    | Green / Goto    |    | Green / APP / Repeat        |
|   | 7           |   | 7                 |   | Yellow / Angle  |   | Yellow / YouTube / Repeat   |
|  | 8           |  | 8                 |  | Blue / USB/Card |  | Blue / Prime Video / Random |
|  | 9           |  | 9                 |  | Subtitle        |  | Subtitle / EQ               |
|  | 0           |  | 0                 |  | Info            |  | Info / Angle                |
|  | - / - / +10 |  | Guide / EPG / +/- |  | Menu / Exit     |  | Menu / Home                 |
|  | Recall      |  | Back / Return     |  | Menu / Exit     |  | Exit / Cancel / Clear       |
|  | P-Mode      |  | Picture / Format  |  | + / FAV+        |  | Vol+                        |





| Original         | Recharge                     |
|------------------|------------------------------|
| Canales / Repeat | Display / Media              |
| EPG /            | +  Shift + Guide / EPG / -/- |
| EPG /            | D.Menu / Top                 |
| - / FAV-         | Vol-                         |
| FAV / AB         | Fav / Marker / PC            |
| Teletext / Eject | Eject / Surround             |
| Teletext / Eject | Text / Goto                  |
| Play/Pause / Mix | Play / Slow                  |
| Play/Pause / Mix | Pause / Step / Freeze        |
| Stop / Hold      | Stop / Hold                  |
| DVD-Setup        | Setup / OPT /                |
| << / Index       | << / Tune-                   |
| Up / P.Up        | +  Shift + Up                |
| >> / Size        | >> / Tune+                   |
| Left / Cancel    | +  Shift + Left              |
| OK / Reveal      | +  Shift + OK                |
| Right / Clock    | +  Shift + Right             |

| Original       | Recharge        |
|----------------|-----------------|
| I<< / TV/Radio | I<< / Preset-   |
| Down / P.Down  | +  Shift + Down |
| >>I / Subpage  | >>I / Preset+   |

