



 






 














 







 



 







 

























Original		Rechange		Original		Rechange	
	Power		Power		Return		Back / Return
	Open/Close		Eject / Surround		Mute		Mute / Dimmer
	1		1		N/P		Red / Netflix / Search
	2		2		Time		Sleep / Timer
	3		3		OSD		Display / Media
	Subtitle		Subtitle / EQ		Setup		Setup / OPT /
	4		4		Up		Up
	5		5		Title/TTX		Text / Goto
	6		6		Left/FAV-		Left
	Angle/Del		Info / Angle		Enter		OK
	7		7		Right/FAV+		Right
	8		8		Menu/PBC		Menu / Home
	9		9		Down		Down
	Language		Audio / Lang I/II		Prog/EPG		Guide / EPG / -/-
	0/10		0		Play		Play / Slow
	+10		Fav / Marker / PC		Stop		Stop / Hold
	Video		Shift + 4		Pause		Pause / Step / Freeze





Original	Recharge	Original	Recharge
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	L/R		Sound / Title
	Slow		Shift + Play /
	Zoom		Zoom / Size
	Clear		Exit / Cancel / Clear
	Step		Shift + Pause / Step /
	Rec		Rec / Rec Mode
	Tv/Radio		TV/Radio /
	Source		AV / Input / RDS
	Vol-		Vol-
	Vol+		Vol+

