



Original	Rechange
Standby	Power
Open/close	Eject / Surround
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Shift + Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
0	0
+10	Guide / EPG / -/-
Video	Shift + 4

Original	Rechange
Program	TV/Radio /
Mute	Mute / Dimmer
N/P	AV / Input / RDS
Time	Sleep / Timer
OSD	Display / Media
Setup	Setup / OPT /
Up	Up
Title	Sound / Title
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Return	Back / Return
USB/Card	Smart / List
Stop	Stop / Hold
Play	Play / Slow





Original	Recharge	Original	Recharge
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
l<<	l<< / Preset-		
>>l	>>l / Preset+		
A-B	Yellow / YouTube / Repeat		
Repeat	Green / APP / Repeat		
L/R	Red / Netflix / Search		
Slow	Shift + Play /		
Vol+	Vol+		
Echo+	CH+ / Page+		
Mic Vol+	Shift + CH+ /		
Mic	Info / Angle		
Vol-	Vol-		
Echo-	CH- / Page-		
Mic Vol-	Shift + CH- /		
Zoom	Zoom / Size		

