



Original		Rechange		Original		Rechange	
	Power		Power		Delete		3D
	TV - Gids		List		Exit		Exit
	Extra		Options		Back		Back
	Comm.		Subt		<<		<<
	TV - Theek		Dual		>>		>>
	Home		Smart		Pause		Pause
	Mute		Mute		Play		Play
	Help		Info		Rec		Rec
	Vol+		Vol +		Stop		Stop
	Vol-		Vol -		Text		Text
	CH+		Ch +		Red		Red
	CH-		Ch -		Green		Green
	Up		Up		Yellow		Yellow
	Left		Left		Blue		Blue
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3





Original		Recharge		Original		Recharge	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Guide				
	. []>		AV				





Original		Recharge	
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	. →		AV
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -

Original		Recharge	

