



 




 





 




 








Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Source		AV		Vol +		Vol +
	1		1		Vol -		Vol -
	2		2		Mute		Mute
	3		3		CH +		Ch +
	4		4		CH -		Ch -
	5		5		Exit		Exit
	6		6		Menu		Menu
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	CH. List		Smart		OK		Ok
	Back		Back		TV / Radio		TV/R
	P.Mode		Format		FAV		Pre Ch
	S.Mode		Dual		Text		Text
	Sleep		Sleep		Audio		Shift + Dual





Original		Rechange		Original		Rechange	
	EPG		Guide		Yellow		Yellow
	Sub.T		Subt		Blue		Blue
	Reveal		3D				
	Hold		Options				
	Index		Media				
	Sub.PG		Shift + Subt				
	Rec		Rec				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	Size		Eject				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	Red		Red				
	Green		Green				

