 




 







 

 
 











 



 












 







 
 


 
 


 

 


 
 




Original		Rechange		Original		Rechange	
	Power		Power		EPG		Shift + Guide
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		FAV+		Shift + Ch +
	8		8		FAV-		Shift + Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	-/--		Guide		Sleep		Sleep
	Recall		Back		P.Mode		Shift + Format
	Menu		Menu		S.Mode		Shift + Dual
	Exit		Exit		FAV		Pre Ch
	Tv/AV		AV		Display		Info





Original		Rechange		Original		Rechange	
	P.Size		Format		Green		Green
	Nicam/A2		Options		Yellow		Yellow
	Tv/Radio		TV/R		Cyan		Blue
	Text		Text				
	Index		Smart				
	Subtitle		Subt				
	I<</Hold		I<<				
	Audio		Dual				
	>>I/Size		>>I				
	<</Subpage		<<				
	>>/Reveal		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec/PVR		Rec				
	Media		Media				
	Red		Red				

