











 












 



Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute		5		5
	Display	+	Shift + Info		6		6
	Sleep		Sleep		7		7
	Pic. Size		TV/R		8		8
	P. Mode	+	Shift + Format		9		9
	S.Mode		Dual		0		0
	Still		Pause		-/--	+	Shift + Guide
	PIP	+	Shift + 1		Return		Back
	P.Input	+	Shift + 2		CH +		Ch +
	P.Position	+	Shift + 3		CH -		Ch -
	P.Size		Format		Vol +		Vol +
	P.Swap	+	Shift + 5		Vol -		Vol -
	S.Input	+	Shift + 6		TV Menu		Menu
	1		1		DVB Menu	+	Shift + Menu
	2		2		Up		Up
	3		3		Left		Left





Original	Rechange
 Enter	 Ok
 Right	 Right
 Down	 Down
 AV / TV	 AV
 Exit	 Exit
 Text	 Text
 Hold	 Stop
 Index	 Smart
 Cancel	 Shift + Exit
 Mix	 Shift + Text
 Size	 Eject
 Sub Page	 Shift + Subt
 Reveal	 Shift + Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Cyan	 Blue

Original	Rechange
 DVB Source	 Media
 P.Scan	 >>
 Key Lock	 Rec
 Surround	 3D
 Info	 Info
 FAV	 Pre Ch
 Nicam / A2	 Options
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Shift + Dual

