 


 

 
 
 

 




 
 
 


 
 
 
 






	Original	Rechange		Original	Rechange
	Power		Power		Exit
	TV/AV		AV		Vol +
	TV/TXT		Text		Vol -
	Cancel		Eject		Mute
	Reveal		Options		Channel List
	DTV		Smart		EPG
	Hold		Media		Info
	Size		Format		Up
	Subpage		D. Menu		Down
	Index		3D		Right
	Red		Red		Left
	Green		Green		Ok
	Yellow		Yellow		1
	Blue		Blue		2
	CH+		Ch +		3
	CH-		Ch -		4
	Menu		Menu		5





	Original	Rechange	Original	Rechange
	6			>>
	7			Play
	8			Pause
	9			
	0			
	FAV			
	Recall			
	Picture	 + 		
	Sound	 + 		
	Nicam/A2			
	Sleep			
	Subtitle			
	Tv/Radio			
	<<			
	>>			
	Repeat	 + 		
	I<<			

