



Original	Rechange	Original	Rechange
Power	Power	Digest	Setup / OPT /
Mute	Mute / Dimmer	Menu	Menu / Home
1	1	EPG	Guide / EPG / -/-
2	2	Exit	Exit / Cancel / Clear
3	3	Play	Play / Slow
4	4	Zoom	Zoom / Size
5	5	Pause	Pause / Step / Freeze
6	6	<< / Tune-	<< / Tune-
7	7	>> / Tune+	>> / Tune+
8	8	Rec	Rec / Rec Mode
9	9	Stop	Stop / Hold
0	0	UP	Up
Info	Info / Angle	Down	Down
FAV	Fav / Marker / PC	Right	Right
Page+	Shift + CH+ /	Left	Left
Page-	Shift + CH- /	OK	OK
Audio	Audio / Lang I/II	CH+	CH+ / Page+

Original	Rechange	Original	Rechange
Digest	Setup / OPT /	Digest	Setup / OPT /
Menu	Menu / Home	Menu	Menu / Home
EPG	Guide / EPG / -/-	EPG	Guide / EPG / -/-
Exit	Exit / Cancel / Clear	Exit	Exit / Cancel / Clear
Play	Play / Slow	Play	Play / Slow
Zoom	Zoom / Size	Zoom	Zoom / Size
Pause	Pause / Step / Freeze	Pause	Pause / Step / Freeze
<< / Tune-	<< / Tune-	<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+	>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode	Rec	Rec / Rec Mode
Stop	Stop / Hold	Stop	Stop / Hold
UP	Up	UP	Up
Down	Down	DOWN	Down
Right	Right	RIGHT	Right
Left	Left	LEFT	Left
OK	OK	OK	OK
CH+	CH+ / Page+	CH+	CH+ / Page+



