 



 



 

 

 
 
 
 
 
 
 

 

 

 

 
 
 
 
 



 
 
 

 





Original		Recharge		Original		Recharge	
	Power		Power		Netflix		Media
	Vol+		Vol +		TV		Info
	Vol-		Vol -		Micro		Guide
	Mute		Mute				
	T		TV/R				
	Mouse		Options				
	P+		Ch +				
	P-		Ch -				
	Home		Smart				
	Source		AV				
	Back		Back				
	≡		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				

