 


Original	Rechange
 Power AMP	 Power
 Power Audio	 Shift + Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >=10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up
 Menu	 Menu / Home
 Left	 Left

Original	Rechange
 Select	 OK
 Right	 Right
 Down	 Down
 Display	 Display / Media
 Band	 Smart / List
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Tape 1	 Shift + 5
 Tape 2	 Shift + 4
 CD	 Shift + 3
 Tuner	 Shift + 6
 MD	 Shift + 8
 DVD	 Shift + 2
 Aux	 Shift + 7
 Phono	 Shift + 1
 Muting	 Mute / Dimmer
 Volume-	 Vol-

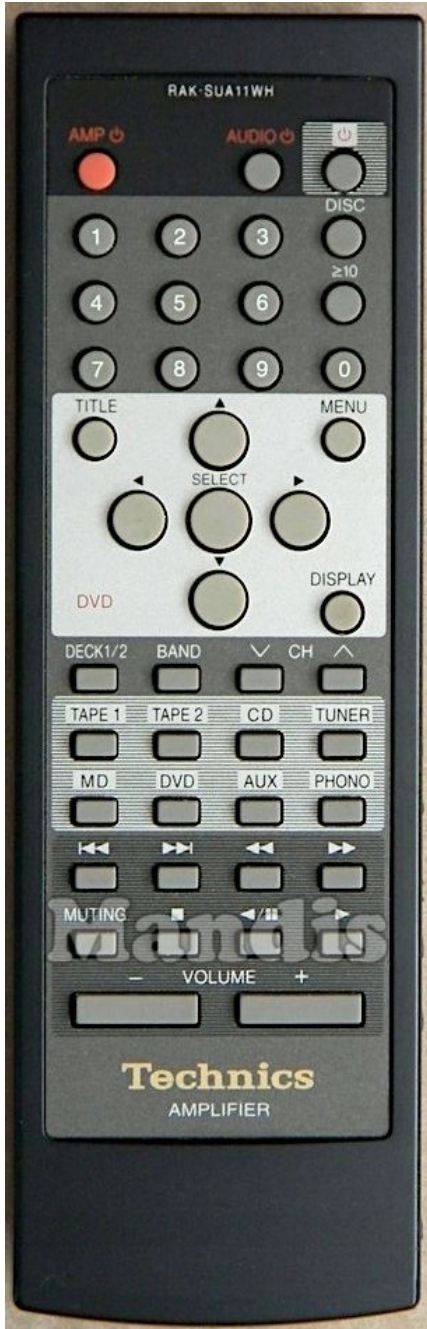 




Original	Recharge	Original	Recharge
LUM+ Volume+	+ VOL Vol+		

 




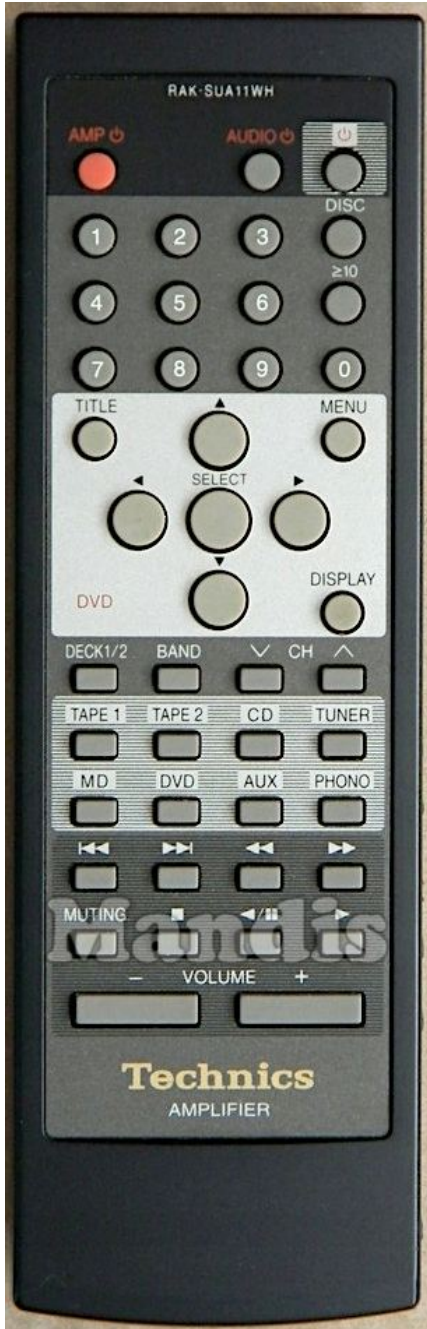

Original		Rechange		Original		Rechange	
	Power DVD		Power		Right		Right
	1		1		Down		Down
	2		2		Display		Display / Media
	3		3		Band		Smart / List
	Disc		Eject / Surround		CH-		CH- / Page-
	4		4		CH+		CH+ / Page+
	5		5		Tape		Shift + 5
	6		6		CD		Shift + 3
	>10		Guide / EPG / -/-		DVD		Shift + 2
	7		7		I<</<<		I<< / Preset-
	8		8		>>/>>I		>>I / Preset+
	9		9		Muting		Mute / Dimmer
	0		0		Stop		Stop / Hold
	Up		Up		Play		Play / Slow
	Menu		Menu / Home		Volume-		Vol-
	Left		Left		Volume+		Vol+
	Select		OK				



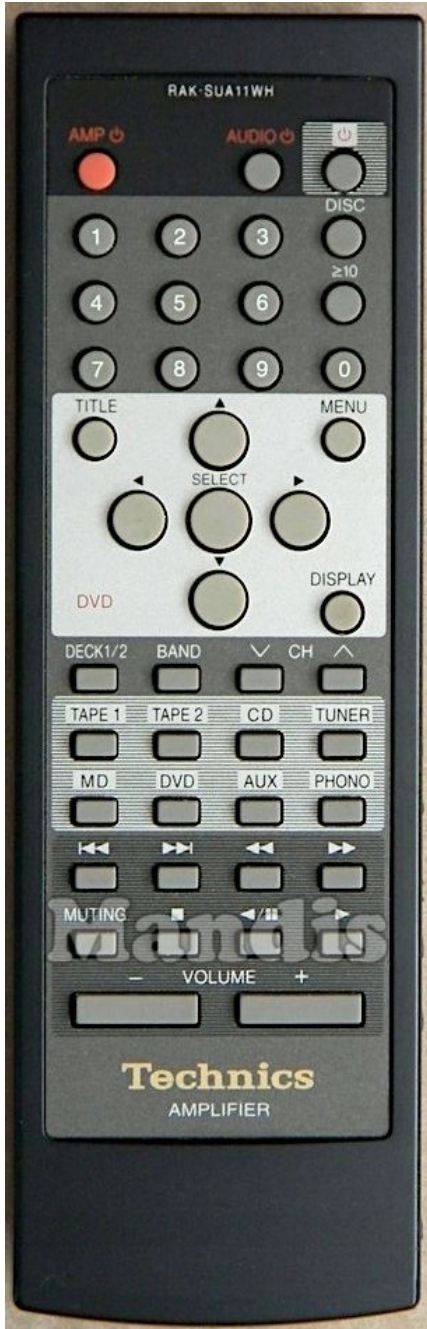

Original	Rechange
Power CD	Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>=10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
CD	Shift + 3
TUNER	Shift + 6
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Rechange
<<	<< / Tune-
>>	>> / Tune+
Muting	Mute / Dimmer
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Volume-	Vol-
Volume+	Vol+

