



Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute
	Left
	Up
	Right
	OK
	Down
	V -
	V +
	P -
	P +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	Text





Original	Rechange
[≡o]	Sleep / Timer
Hold	Stop / Hold
[≡X]	Exit / Cancel / Clear
Mix / PIP Swap	Smart / List
PIP / Size	Zoom / Size
PIP Down / [≡?]	I<< / Preset-
PIP Up / Index	>>I / Preset+
[TV]	TV/Radio /
[AV]	AV / Input / RDS

Original	Rechange

