



| | Original | Rechange | Original | Rechange |
|--|---|--|--|---|
| |  Power |  Power |  Exit |  Exit |
| |  Mute |  Mute |  Up |  Up |
| |  1 |  1 |  Down |  Down |
| |  2 |  2 |  Right |  Right |
| |  3 |  3 |  Left |  Left |
| |  4 |  4 |  OK |  Ok |
| |  5 |  5 |  Vol+ |  Vol + |
| |  6 |  6 |  Vol- |  Vol - |
| |  7 |  7 |  Sound |  Shift + Dual |
| |  8 |  8 |  PIC |  Options |
| |  9 |  9 |  CH+ |  Ch + |
| |  0 |  0 |  CH- |  Ch - |
| |  Audio |  Dual |  Sleep |  Sleep |
| |  Recall |  Back |  Aspect |  3D |
| |  Tv-Menu |  Menu |  Freeze |  Shift + Media |
| |  Source |  AV |  Tv/Radio |  TV/R |
| |  CH.List |  List |  Text |  Text |



