







 
















 








 

 

 

 
 














 

 





 

 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Eject/Tv Audio	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Vol-	 Vol-
 Pic	 Picture / Format
 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 DVD Setup	 Setup / OPT /
 Back/Tv/Radio	 Shift + Back / Return
 Text	 Text / Goto





	Original	Rechange
	EPG	Guide / EPG / -/--
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold
	FAV	Fav / Marker / PC
	Info	Info / Angle
	Red/DVD/USB	Red / Netflix / Search
	Green/Title	Green / APP / Repeat
	Yellow/PBC	Yellow / YouTube / Repeat
	Blue/Angle	Blue / Prime Video / Random
	<<	<< / Tune-
	>>	>> / Tune+
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Return	Back / Return
	Display	Display / Media
	DVD Audio	Audio / Lang I/II

	Original	Rechange
	Subtitle	Subtitle / EQ
	Reveal	+ Shift + Exit / Cancel / Clear
	Hold	+ Shift + Stop /
	List	Smart / List
	Index	TV/Radio /
	Subpage	+ Shift + Smart / List
	Size	Zoom / Size
	Mix	+ Shift + Display / Media
	Freeze	+ Shift + Pause / Step /

