


Original		Rechange		Original		Rechange	
	Standby		Power		Title / TTX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		Menu / PBC		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Left / Fav-		Left
	Rec		Rec / Rec Mode		Enter		OK
	<<		<< / Tune-		Right / Fav+		Right
	>>		>> / Tune+		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	SUBT / RIP		Subtitle / EQ		L/R		Smart / List
	Open / Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV / Radio		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3

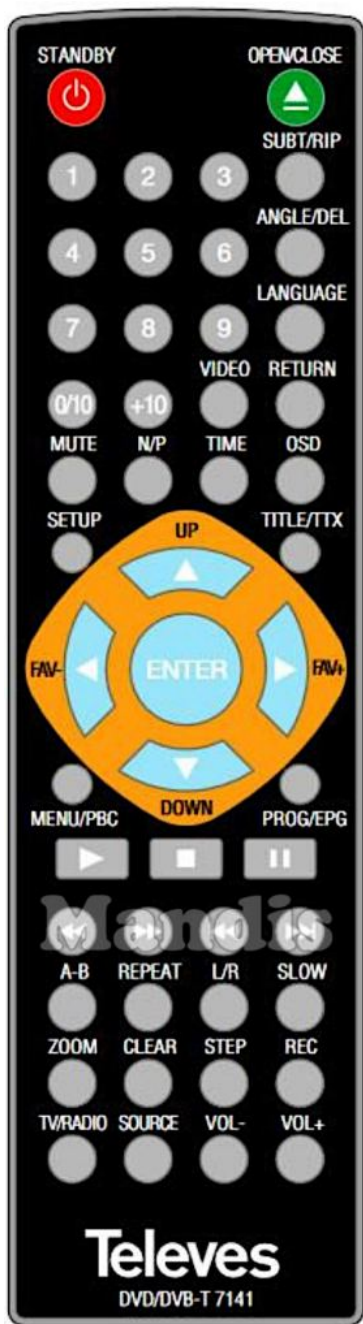



	Original	Recharge		Recharge
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	+10		Guide / EPG / -/--	
	0/10		0	
	Repeat		Green / APP / Repeat	
	A-B		Yellow / YouTube / Repeat	
	Slow		Shift + Play /	
	Step		Shift + Pause / Step /	
	Prog / EPG		Shift + TV/Radio / Program	
	Angle / Del		Shift + Back / Return	
	N/P		Shift + Display / Media	
	Video		Shift + 4	
	Prog / EPG		Shift + Guide / EPG / -/--	

	Original	Recharge

