



























 

 






	Original	Recharge	Original	Recharge
	Power			Down
	Mute			Vol-
	BT			
	OPT			
	AUX			
	USB			
	SD			
	Line In			
	Vol+			
	Vol+			
	I<<			
	I<<			
	Play / Pause			
	Play / Pause			
	Play / Pause			
	>>I			
	>>I	