
 




Original		Rechange		Original		Rechange	
	Open/Close		Eject / Surround		0		0
	Input Select		AV / Input / RDS		Clear		Exit / Cancel / Clear
	HDMI		Shift + 0		[i+]/Info		Info / Angle
	Standby		Power		Text		Text / Goto
	1		1		Variable Replay		Vol+
	2		2		Variable Skip		Vol-
	3		3		Guide		Guide / EPG / -/--
	Prog+		CH+ / Page+		Top Menu		D.Menu / Top
	4		4		Disc Menu		Menu / Home
	5		5		Up		Up
	6		6		Left		Left
	Prog-		CH- / Page-		Enter		OK
	7		7		Right		Right
	8		8		Display		Display / Media
	9		9		Down		Down
	Timer Prog		Sleep / Timer		Return		Back / Return
	Setup		Setup / OPT /		Red		Red / Netflix / Search





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Mode	 Yellow / YouTube / Repeat	 Subtitle	 Subtitle / EQ
 Blue/Search	 Blue / Prime Video / Random	 1.3x/0.8x PLY	 Shift + Play /
 Blue/Search	 Shift + Red / Netflix /	 O)/Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Sat Link	 Smart / List
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Pause	 Pause / Step / Freeze		
 VCR	 Shift + 4		
 HDD	 Shift + 7		
 DVD	 Shift + 2		
 Time Slip	 TV/Radio /		
 Dubbing	 Picture / Format		
 Rec Mode	 Shift + Rec / Rec Mode		

