













 
 

 






 
 


 














 


 
 

 

 

 

 



 



 

 






Original		Recharge		Original		Recharge	
	Power		Power		Exit/Back		Exit
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		P+		Ch +
	6		6		P-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		[<<]>		Format
	0		0		→ █ ←		TV/R
	Recall		Pre Ch		[i+] / [≡i]		Info
	Source		AV		Text / [≡] / [≡] []		Text
	Menu/DVD		Menu		▬▬▬▶ / ▾		Pause
	Guide		Guide		▶ / I/II		Play
	[■] [■] [■] [■]		3D		▶ / I/II		Dual










 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 




 




 













 



 




Original	Recharge	Original	Recharge
 << / [≡◀]	 <<		
 << / [≡◀]	 OPT Options		
 >> / Subtitle	 Subt		
 >> / Subtitle	 >>		
 ▲	 Smart		
 ■ / [≡□]	 Stop		
 ⏮ / [≡↶]	 Eject		
 ⏮ / [≡↶]	 I<<		
 ⏭ / [⊕][≡X]	 >>I		
 ⏭ / [⊕][≡X]	 Back		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		








 
 
 








 














 



 
 
 

 
 
 





 



 

 

 
 


Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
 _ Menu/DVD	 Menu	  / [≡□]	 Stop
 - Exit/Back	 Exit	  / [≡⇅]	 Eject
 - Up	 Up	  / [≡⇅]	 I<<<
 Left	 Left	  / [⊙][≡X]	 >>>I
 OK	 Ok	  / [⊙][≡X]	 Back





Original	Recharge	Original	Recharge
 Power	 Power	 Mute	 Mute
 1	 1	 2	 2
 3	 3	 4	 4
 5	 5	 6	 6
 7	 7	 8	 8
 9	 9	 0	 0
 Source	 AV	 P+	 Ch +
 P-	 Ch -	 Vol-	 Vol -
 Vol+	 Vol +		

Original	Recharge	Original	Recharge
 Pause	 Pause	 Play	 Play
 Fast Forward	 Fast Forward	 Fast Reverse	 Fast Reverse
 Stop	 Stop	 Subtitles	 Subt
 Smart	 Smart	 Eject	 Eject
 Back	 Stop	 Fast Forward	 Eject
 Fast Forward	 Fast Forward	 Fast Reverse	 Fast Reverse
 Fast Reverse	 Fast Reverse	 Return	 Back
 Fast Forward	 Fast Forward	 Fast Forward	 Fast Forward

