


Original	Rechange
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	Guide / EPG / -/--
0	0
T/Search	Red / Netflix / Search
EPM	Picture / Format
EAM	Sound / Title
<I Slow	CH- / Page-

Original	Rechange
Slow I>	CH+ / Page+
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
I<< Skip	I<< / Preset-
<</REV	<< / Tune-
FWD/>>	>> / Tune+
Skip >>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down

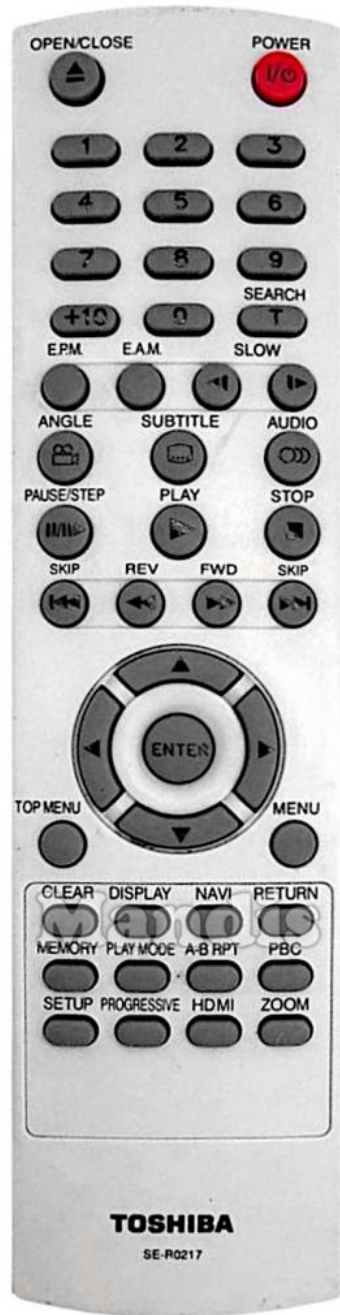



Original	Recharge
MENU	HOME MENU Menu / Home
CLEAR	CLEAR EXIT Cancel / Exit / Cancel / Clear
DISPLAY	MEDIA DISPLAY Display / Media
NAVI	LIST SMART Smart / List
RETURN	RETURN BACK Back / Return
MEMORY	PC FAV MARKER Fav / Marker / PC
PLAY MODE	SHIFT + SLOW Shift + Play /
A-B RPT	YouTube REPEAT A-B Yellow / YouTube / Repeat
PBC	Prime Video RANDOM Blue / Prime Video / Random
SETUP	OPT-TOOLS SETUP Setup / OPT /
PROGRESSIVE	GOTO TEXT Text / Goto
HDMI	SHIFT + HDMI - SAT Shift + 0
HDMI	RDS AV INPUT AV / Input / RDS
ZOOM	SIZE ZOOM Zoom / Size

Original	Recharge

