



Original	Rechange
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
3D	Picture / Format
4	4
5	5
6	6
Mode	D.Menu / Top
7	7
8	8
9	9
Zoom	Zoom / Size
Timer	Sleep / Timer
0	0
[+]	Info / Angle

Original	Rechange
Normal	Smart / List
Input	AV / Input / RDS
Up	Up
PR+	CH+ / Page+
OK[=i]	OK
Left	Left
Vol-	Vol-
Menu	Menu / Home
Right	Right
Vol+	Vol+
[=x]	Subtitle / EQ
PR-	CH- / Page-
Down	Down
[=]	Text / Goto
[=+]	Setup / OPT /
[=o]	Audio / Lang I/II
[=?]	Display / Media





	Original	Recharge	Original	Recharge
	[= ♦]	TV/Radio /		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

