



 






	Original	Rechange
	Power	 Power
	Mute	 Mute
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/--	 Guide
	Prev. Ch.	 Pre Ch
	Sleep	 Sleep
	Still	 Options
	Source	 AV

	Original	Rechange
	Aspect	 3D
	CH +	 Ch +
	CH -	 Ch -
	Vol +	 Vol +
	Vol -	 Vol -
	Info	 Info
	Nicam/A2 / Audio	 Dual
	Auto	 Smart
	P.Mode	 Shift + Format
	Menu	 Menu
	S.Mode	 Shift + Dual
	Exit	 Exit
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	OK	 Ok





Original		Recharge		Original		Recharge	
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Index		List				
	Cancel		Back				
	Reveal		Media				
	Hold		TV/R				
	Subpage		D. Menu				
	TXT		Text				
	Size		Format				
	Subtitle		Subt				

