



Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Audio		Dual
	6		6		PVR		Smart
	7		7		Exit		Exit
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Prev		I<<		Blue		Blue
	Prev		Guide		Volume+		Vol +
	Next		>>I		Volume-		Vol -
	Next		Pre Ch		File List		List
	Menu		Menu		Mute		Mute
	Info		Info		Channel+		Ch +





	Original	Rechange	Original	Rechange
	Channel-	 Ch -		
	<<	 <<		
	Play / Pause	 Play		
	Play / Pause	 Pause		
	Stop	 Stop		
	>>	 >>		
	www	 Media		
	Subtitle	 Subt		
	Timer	 AV		
	Timer	 Sleep		
	Rec	 Rec		
	TV	 TV/R		
	Radio	 Shift + TV/R		
	Text	 Text		
	Help	 D. Menu		

