



Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 MTS	 Info / Angle
 DTV/ATV	 D.Menu / Top	 Rec List	 Smart / List
 Recall	 Back / Return	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode





Original	Recharge	Original	Recharge
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / -/--	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 << / Cancel	 << / Preset-		
 << / Cancel	 Shift + Exit / Cancel / Clear		
 >> / Sub.PG	 >> / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		



 







Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original	Recharge	Original	Recharge
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / -/-	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 << / Cancel	 << / Preset-		
 << / Cancel	 Shift + Exit / Cancel / Clear		
 >> / Sub.PG	 >> / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		

Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Cyan	 Blue / Prime Video / Random		

