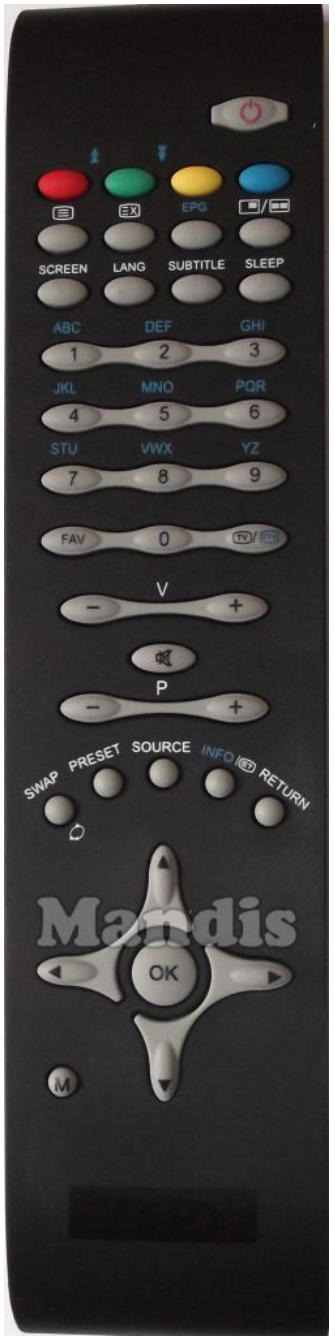

Original		Replacement		Original		Replacement	
	Power		Power		5	TAPE 5	5
	Red/ ↑	NETFLIX SEARCH	Red / Netflix / Search		6	TUNER 6	6
	Green/ ↓	APP REPEAT	Green / APP / Repeat		7	AUX - HDD 7	7
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		8	USB 8	8
	Blue	Prime Video RANDOM	Blue / Prime Video / Random		9	BLUETOOTH 9	9
	[≡]	GOTO TEXT	Text / Goto	FAV	FAV	PC FAV MARKER	Fav / Marker / PC
	[≡x]	CLEAR EXIT CANCEL	Exit / Cancel / Clear		0	HDMI - SAT 0	0
EPG	EPG	-/-- GUIDE EPG	Guide / EPG / -/--		Tv/ DTV	PROGRAM TV/ RADIO	TV/ Radio /
	[*]/[■■]	SIZE ZOOM	Zoom / Size		Vol -	VOL −	Vol -
SCREEN	Screen	FORMAT PICTURE	Picture / Format		Vol +	+ VOL	Vol +
LANG	Lang	LANG I/II AUDIO	Audio / Lang I/II		Mute	DIMMER MUTE	Mute / Dimmer
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ		PR-	CH PAGE −	CH- / Page-
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer		PR+	+ CH PAGE	CH+ / Page+
1	1	TV 1	1	PRESET	Preset	LIST SMART	Smart / List
2	2	DVD 2	2	SOURCE	Source	RDS AV INPUT	AV / Input / RDS
3	3	CD - STB 3	3	INFO	Info/[≡?]	ANGLE INFO	Info / Angle
4	4	VIDEO 4	4	SWAP	Swap/Recall	MEDIA DISPLAY	Display / Media

Original	Replacement	Original	Replacement
Return	Back / Return		
Up	Up		
Left	Left		
OK	OK		
Right	Right		
Down	Down		
M	Menu / Home		