# Mandis shop

## Sony RM-PJ20

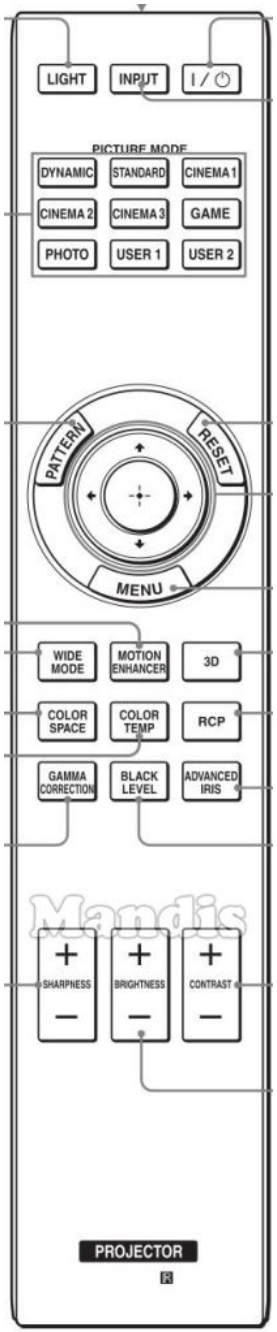


| Originalfernbedienung | | Ersatzfernbedienung | |
|---|---|---|---|
| INPUT | INPUT | RDS AV INPUT | AV / Input / RDS |
| I/⏻ | POWER | | Power |
| DYNAMIC | DYNAMIC | VIDEO 4 | 4 |
| STANDARD | STANDARD | TAPE 5 | 5 |
| CINEMA 1 | CINEMA1 | TV 1 | 1 |
| CINEMA 2 | CINEMA2 | DVD 2 | 2 |
| CINEMA 3 | CINEMA3 | CD-STB 3 | 3 |
| GAME | GAME | TUNER 6 | 6 |
| PHOTO | PHOTO | AUX-HDD 7 | 7 |
| USER 1 | USER1 | USB 8 | 8 |
| USER 2 | USER2 | BLUETOOTH 9 | 9 |
| PATTERN | PATTERN | LIST SMART | Smart / List |
| ↑ | UP | ▲ | Up |
| RESET | RESET | MEDIA DISPLAY | Display / Media |
| ← | LEFT | ◀ | Left |
| ✦ | OK | OK | OK |
| → | RIGHT | ▶ | Right |

| Originalfernbedienung | | Ersatzfernbedienung | |
|---|---|---|---|
| ↓ | DOWN | ▼ | Down |
| MENU | MENU | HOME MENU | Menu / Home |
| WIDE MODE | WIDE MODE | SIZE ZOOM | Zoom / Size |
| MOTION ENHANCER | MOTION | PROGRAM TV/RADIO | TV/Radio / |
| 3D | 3D | SHIFT + CD-STB 3 | Shift + 3 |
| COLOR SPACE | COLOR SPACE | OPT-TOOLS SETUP | Setup / OPT / |
| COLOR TEMP | COLOR TEMP | FORMAT PICTURE | Picture / Format |
| RCP | RCP | TIMER SLEEP | Sleep / Timer |
| GAMMA CORRECTION | GAMMA | ANGLE INFO | Info / Angle |
| BLACK LEVEL | BLACK LEVEL | GOTO TEXT | Text / Goto |
| ADVANCED IRIS | ADVANCED IRIS | TOP MENU D.MENU | D.Menu / Top |
| + SHARPNESS | SHARPNESS+ | + VOL | Vol + |
| + BRIGHTNESS | BRIGHTNESS+ | + CH PAGE | CH+ / Page+ |
| + CONTRAST | CONTRAST+ | PRESET+ ⏭ | >>I / Preset+ |
| SHARPNESS — | SHARPNESS- | VOL — | Vol - |
| BRIGHTNESS — | BRIGHTNESS- | CH PAGE — | CH- / Page- |
| CONTRAST — | CONTRAST- | PRESET- ⏮ | I<< / Preset- |