Mandis shop

CLEANFAST

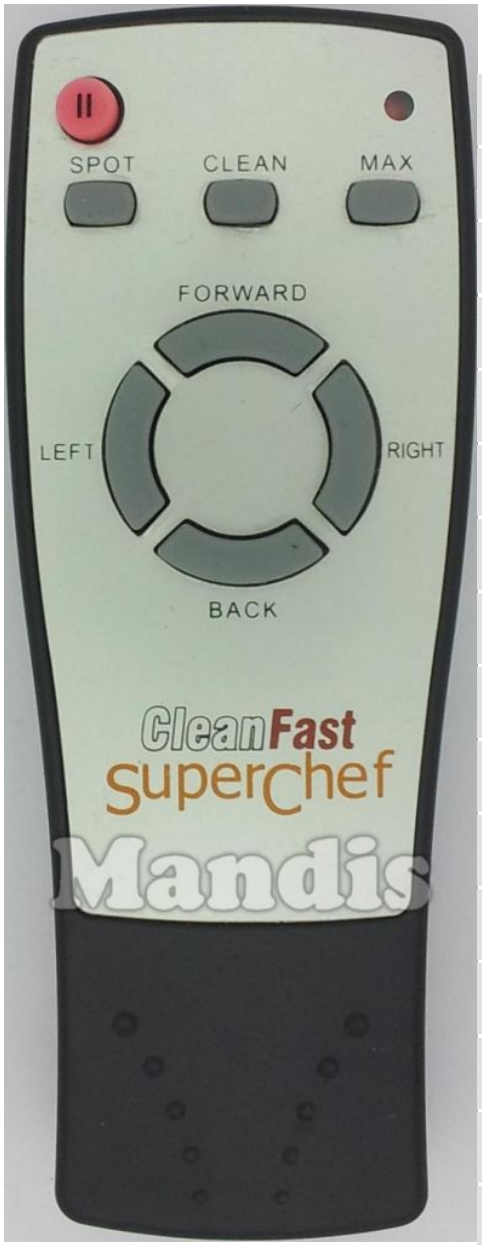

Original		Replacement	
II	II		Power
SPOT	Spot	1 SETUP	1 / Setup
CLEAN	Clean	2 MENU	2 / Menu
MAX	Max	3 EXIT	3 / Exit
FORWARD	Forward		Up
BACK	Back		Down
RIGHT	Right		Right
LEFT	Left		Left

Original	Replacement

https://all-remote-controls.nl/en/SuperChef/1038414-82980-replacement-remote-control-for-SuperChef-Clean-Fast.html