Mandis shop

RM-SUXH10R

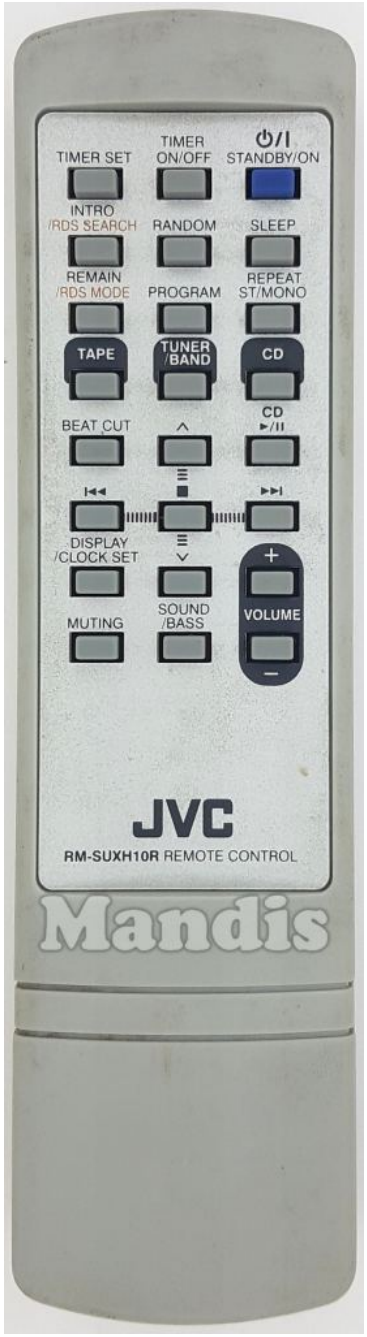

Original		Replacement	
STANDBY/ON	Power		Power
TIMER SET	Timer Set	SHIFT + TIMER SLEEP	Shift + Sleep / Timer
TIMER ON/OFF	Timer On/Off	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
INTRO /RDS SEARCH	Intro/RDS Search	OPT-TOOLS SETUP	Setup / OPT /
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
REMAIN /RDS MODE	Remin/RDS	TOP MENU D.MENU	D.Menu / Top
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /
REPEAT ST/MONO	Repeat St/Mo	GOTO TEXT	Text / Goto
TAPE	Tape	TAPE 5	5
TUNER /BAND	Tuner/Band	TUNER 6	6
CD	CD	CD - STB 3	3
BEAT CUT	Beat CUT	LANG I/II AUDIO	Audio / Lang I/II
CD ►/II	Play/Pause CD	SLOW ▶	Play / Slow
DISPLAY /CLOCK SET	Display/Clock Set	MEDIA DISPLAY	Display / Media
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
SOUND /BASS	Sound/Bass	TITLE SOUND	Sound / Title

Original		Replacement	
VOLUME +	Vol+	VOL +	Vol+
VOLUME −	Vol-	VOL −	Vol-
^	Up	▲	Up
v	Down	▼	Down
▶▶I	>>I	PRESET+ ▶▶I	>>I / Preset+
I◀◀	I<<	PRESET- I◀◀	I<< / Preset-
■	Stop	HOLD ■	Stop / Hold

https://all-remote-controls.nl/en/JVC/1064984-65390-replacement-remote-control-for-JVC-RM-SUXH10R.html