Mandis shop

Panasonic N2QAYB000436

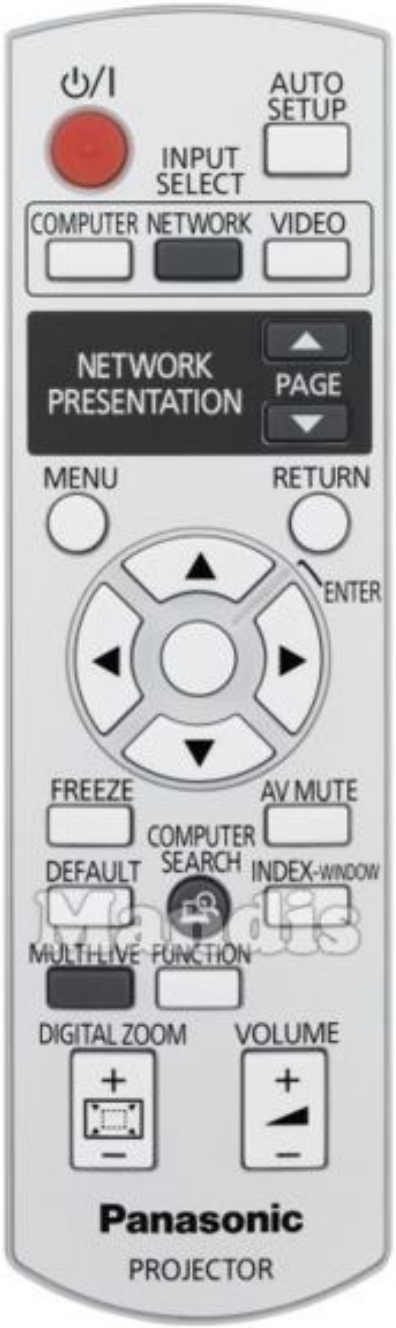

Original		Replacement	
AUTO SETUP	Auto Setup	OPT-TOOLS SETUP	Setup / OPT /
MULTI-LIVE	Multi-Live	MEDIA DISPLAY	Display / Media
DEFAULT	Default	-/-- GUIDE EPG	Guide / EPG / -/--
	Digital Zoom-	PRESET-	I<< / Preset-
INDEX-WINDOW	Index Window	ANGLE INFO	Info / Angle
COMPUTER SEARCH	Computer	TV 1	1
NETWORK	Network	NETFLIX SEARCH	Red / Netflix / Search
FUNCTION	Function	TOP MENU D.MENU	D.Menu / Top
AV MUTE	AV Mute	DIMMER MUTE	Mute / Dimmer
DIGITAL ZOOM	Digital Zoom+	PRESET+	>>I / Preset+
	Right		Right
	Volume-	VOL	Vol-
VOLUME	Volume+	VOL	Vol+
FREEZE	Freeze	STEP-FREEZE	Pause / Step / Freeze
⏻/I	Power		Power
	Left		Left
	Down		Down

Original		Replacement	
	Up		Up
RETURN	Return	RETURN BACK	Back / Return
MENU	Menu	HOME MENU	Menu / Home
PAGE	Page Down	CH PAGE	CH- / Page-
PAGE	Page Up	CH PAGE	CH+ / Page+
VIDEO	Video	VIDEO 4	4
	Enter	OK	OK
COMPUTER	Computer	PC FAV MARKER	Fav / Marker / PC

https://all-remote-controls.nl/en/Panasonic/1067815-84418-replacement-remote-control-for-Panasonic-N2QAYB000436.html