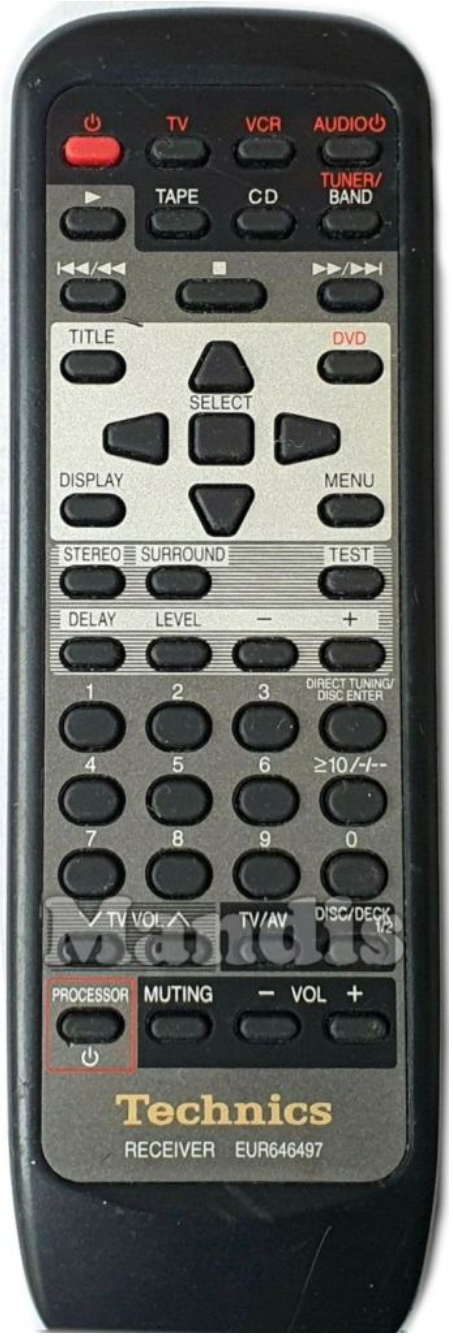

Original		Rechange	
	Power TV		Power
	TV	SHIFT + TV 1	Shift + 1
	VCR	SHIFT + VIDEO 4	Shift + 4
	Tape	SHIFT + TAPE 5	Shift + 5
	CD	SHIFT + CD-STB 3	Shift + 3
	Tuner / Band	SHIFT + TUNER 6	Shift + 6
	Up		Up
	DVD	SHIFT + DVD 2	Shift + 2
	Left		Left
	Select	OK	OK
	Right		Right
	Display	MEDIA DISPLAY	Display / Media
	Down		Down
	Menu	HOME MENU	Menu / Home
	Stereo	LANG I/II AUDIO	Audio / Lang I/II
	Surround	SURROUND	Eject / Surround
	Test	GOTO TEXT	Text / Goto

Original		Rechange	
	Delay	RETURN BACK	Back / Return
	Level	LIST SMART	Smart / List
	-	CH PAGE −	CH- / Page-
	+	+ CH PAGE	CH+ / Page+
	1 Tv	TV 1	1
	2 Tv	DVD 2	2
	3 Tv	CD-STB 3	3
	4 Tv	VIDEO 4	4
	5 Tv	TAPE 5	5
	6 Tv	TUNER 6	6
	>10/-/-- Tv	-/-- GUIDE EPG	Guide / EPG / -/--
	7 Tv	AUX-HDD 7	7
	8 Tv	USB 8	8
	9 Tv	BLUETOOTH 9	9
	0 Tv	HDMI-SAT 0	0
	Tv Vol Down	SHIFT + VOL −	Shift + Vol -
	Tv Vol Up	SHIFT + VOL +	Shift + Vol +

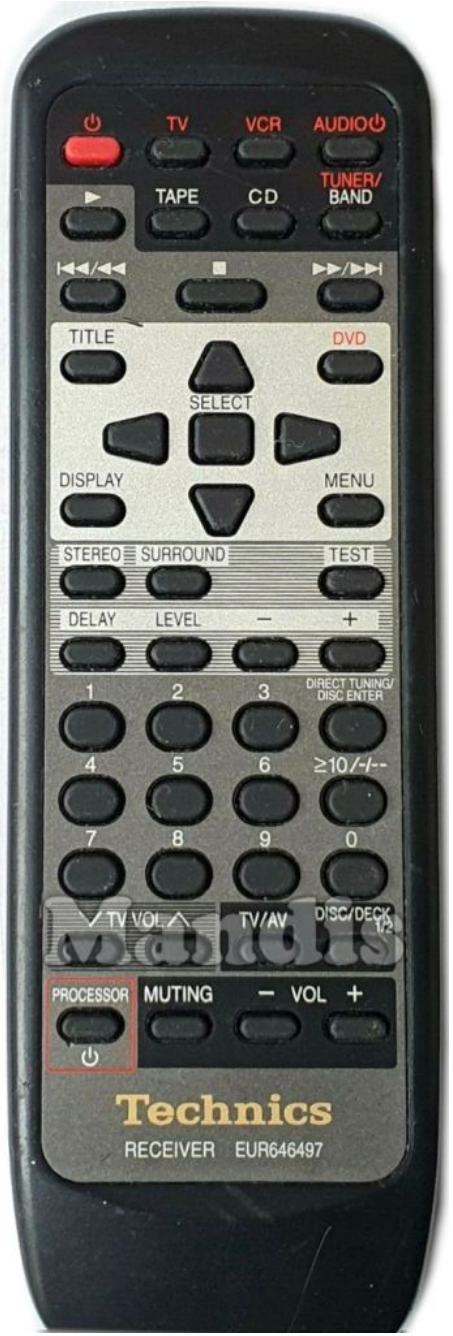

Original	Rechange	Original	Rechange
TV/AV Tv/AV	RDS AV INPUT AV / Input / RDS		
DISC/DECK 1/2 Disc/Deck 1/2	TOP MENU D.MENU D. Menu / Top		
MUTING Muting	DIMMER MUTE Mute / Dimmer		
− VOL Vol -	VOL − Vol -		
VOL + Vol +	+ VOL Vol +		

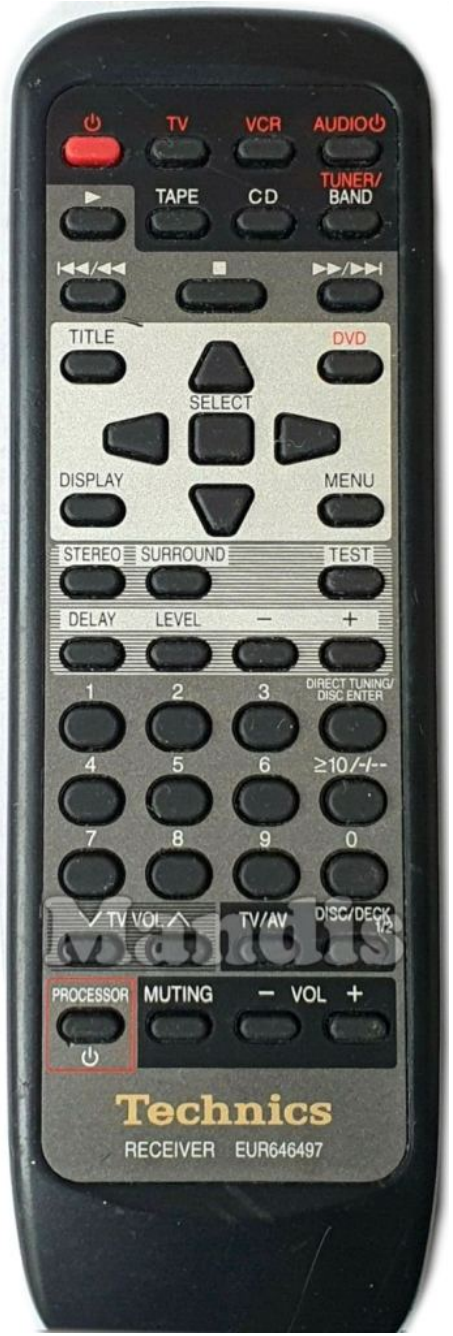

Original		Rechange	
	Power DVD		Power
	TV	SHIFT + TV 1	Shift + 1
	VCR	SHIFT + VIDEO 4	Shift + 4
	Play DVD	SLOW	Play / Slow
	Tape	SHIFT + TAPE 5	Shift + 5
	CD	SHIFT + CD - STB 3	Shift + 3
	Tuner / Band	SHIFT + TUNER 6	Shift + 6
	I <<| << DVD	PRESET-	I << / Preset-
	I <<| << DVD	TUNE-	<< / Tune-
	Stop DVD	HOLD	Stop / Hold
	>>| >>I DVD	TUNE+	>> / Tune+
	>>| >>I DVD	PRESET+	>>I / Preset+
	Up		Up
	DVD	SHIFT + DVD 2	Shift + 2
	Left		Left
	Select	OK	OK
	Right		Right

Original		Rechange	
	Display	MEDIA DISPLAY	Display / Media
	Down		Down
	Menu	HOME MENU	Menu / Home
	Stereo	LANG I/II AUDIO	Audio / Lang I/II
	Surround	SURROUND	Eject / Surround
	Test	GOTO TEXT	Text / Goto
	Delay	RETURN BACK	Back / Return
	Level	LIST SMART	Smart / List
	-	CH PAGE -	CH- / Page-
	+	CH PAGE +	CH+ / Page+
	1 DVD	TV 1	1
	2 DVD	DVD 2	2
	3 DVD	CD - STB 3	3
	4 DVD	VIDEO 4	4
	5 DVD	TAPE 5	5
	6 DVD	TUNER 6	6
	>10/ - / - - DVD	-/-- GUIDE EPG	Guide / EPG / -/--

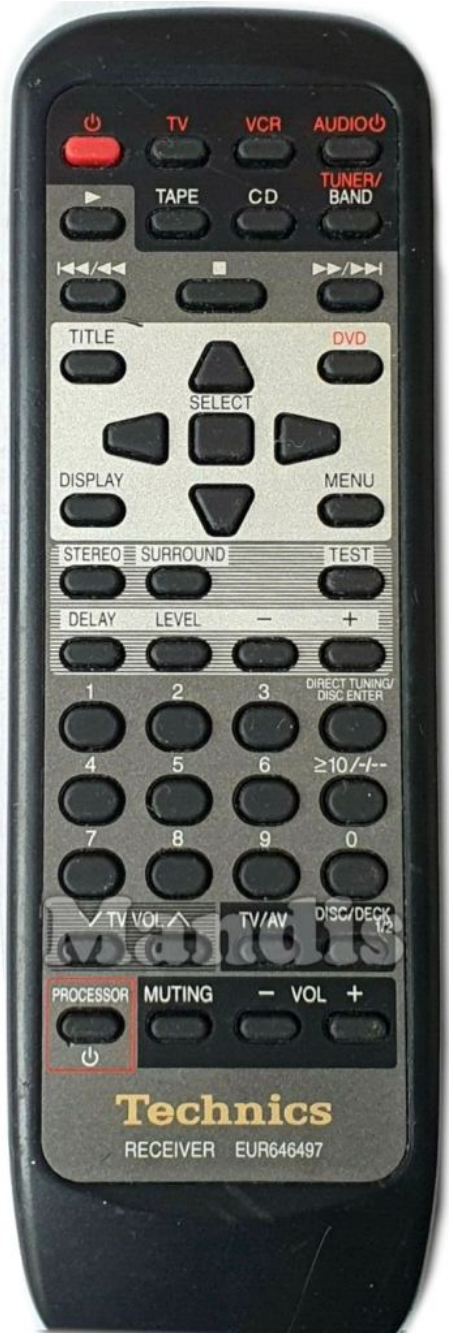

Original		Rechange	
7	7 DVD	7	7
8	8 DVD	8	8
9	9 DVD	9	9
0	0 DVD	0	0
DISC/DECK 1/2	Disc/Deck 1/2	D.MENU	D. Menu / Top
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
– VOL	Vol -	VOL –	Vol -
VOL +	Vol +	+ VOL	Vol +

Original	Rechange

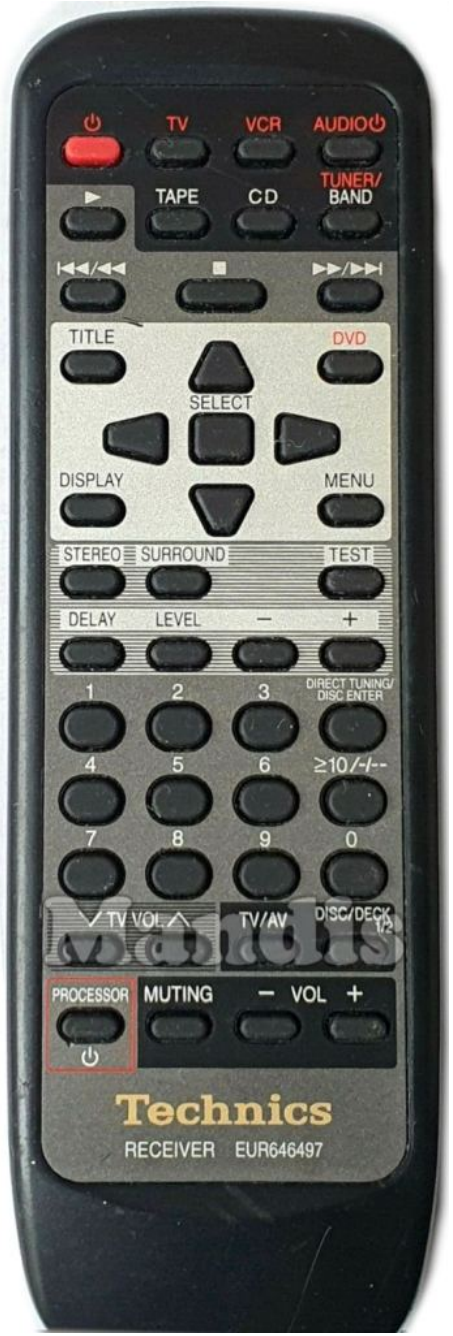

Original	Rechange
Power CD	Power
Power Tape	Shift + Power
TV	Shift + 1
VCR	Shift + 4
Play CD	Play / Slow
Play Tape	Shift + Play /
Tape	Shift + 5
CD	Shift + 3
Tuner / Band	Shift + 6
I <<I / << CD	<< / Tune-
I <<I / << Tape	Shift + I << / Preset-
I <<I / << CD	I << / Preset-
I <<I / << Tape	Shift + << /
Stop CD	Stop / Hold
Stop Tape	Shift + Stop /
>>I / >>I CD	>> / Tune+
>>I / >>I Tape	Shift + >> / Tune+

Original	Rechange
>>I / >>I CD	>>I / Preset+
>>I / >>I Tape	Shift + >>I / Preset+
Up	Up
DVD	Shift + 2
Left	Left
Select	OK
Right	Right
Display	Display / Media
Down	Down
Menu	Menu / Home
Stereo	Audio / Lang I/II
Surround	Eject / Surround
Test	Text / Goto
Delay	Back / Return
Level	Smart / List
-	CH- / Page-
+	CH+ / Page+

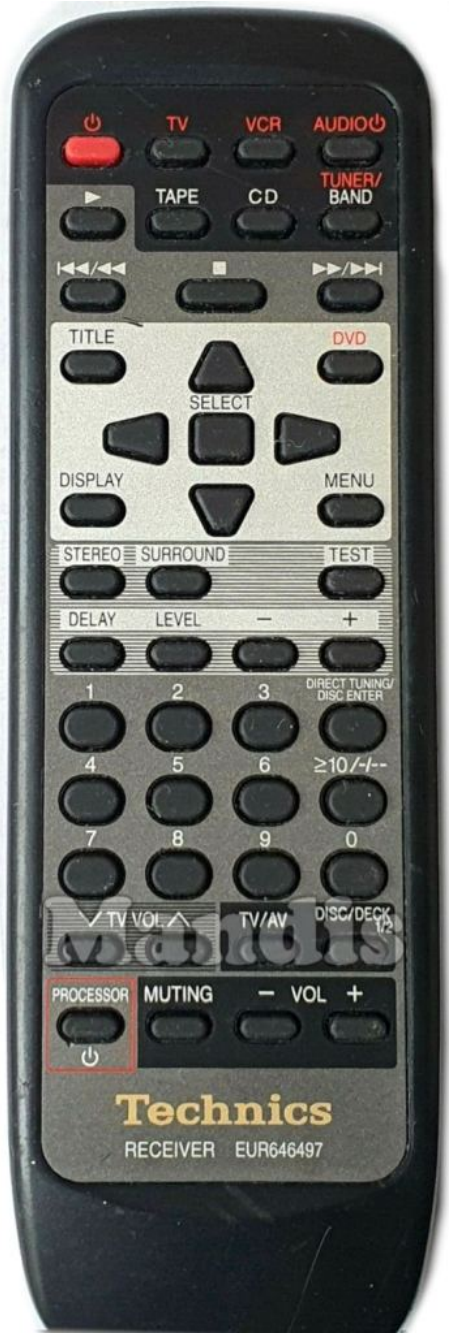

Original	Rechange	Original	Rechange
1 CD- Tape	1		
2 CD- Tape	2		
3 CD- Tape	3		
Direct Tuning/ Disc Ente	D. Menu / Top		
4 CD- Tape	4		
5 CD- Tape	5		
6 CD- Tape	6		
>10/ - / - - CD- Tape	Guide / EPG / - / - -		
7 CD- Tape	7		
8 CD- Tape	8		
9 CD- Tape	9		
0 CD- Tape	0		
Disc/ Deck 1/ 2	Info / Angle		
Disc/ Deck 1/ 2	Shift + Info / Angle		
Muting	Mute / Dimmer		
Vol -	Vol -		
Vol +	Vol +		

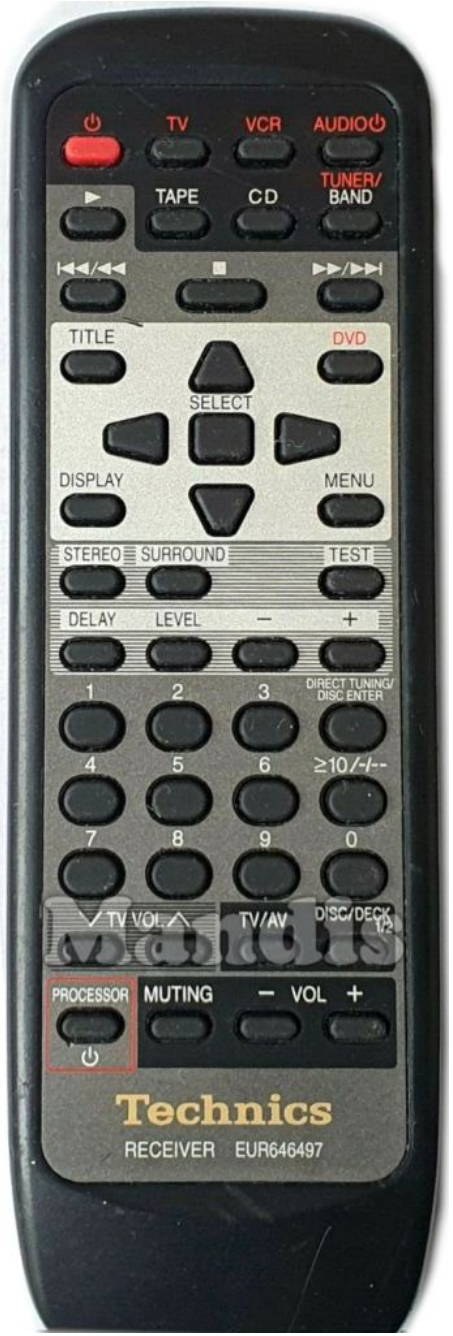

Original	Rechange
Power VCR	SHIFT + Power (Shift + Power)
Power Tuner/Band	Power
TV	NETFLIX / SEARCH (Red / Netflix / Search)
VCR	PC / FAV MARKER (Fav / Marker / PC)
Play	SLOW (Play / Slow)
Tape	SHIFT + PC / FAV MARKER (Shift + Fav / Marker / PC)
CD	YouTube / REPEAT A-B (Yellow / YouTube / Repeat)
TUNER/ BAND	Prime Video / RANDOM (Blue / Prime Video / Random)
I <<<< / <<	TUNE- (<< / Tune-)
Stop	HOLD (Stop / Hold)
>>>> / >>I	TUNE+ (>> / Tune+)
Up	Up
DVD	APP / REPEAT (Green / APP / Repeat)
Left	Left
SELECT	OK (Select / OK)
Right	Right
DISPLAY	MEDIA / DISPLAY (Display / Media)

Original	Rechange
Down	Down
MENU	HOME / MENU (Menu / Home)
STEREO	LANG I/II / AUDIO (Stereo / Audio / Lang I/II)
SURROUND	SURROUND (Surround / Eject / Surround)
TEST	GOTO / TEXT (Test / Text / Goto)
DELAY	RETURN / BACK (Delay / Back / Return)
LEVEL	LIST / SMART (Level / Smart / List)
-	CH PAGE - (CH- / Page-)
+	CH PAGE + (CH+ / Page+)
1 VCR	SHIFT + TV 1 (Shift + 1)
1 Tuner/Band	TV 1 (1)
2 VCR	SHIFT + DVD 2 (Shift + 2)
2 Tuner/Band	DVD 2 (2)
3 VCR	SHIFT + CD-STB 3 (Shift + 3)
3 Tuner/Band	CD-STB 3 (3)
Direct Tuning/Disc Ente	TOP MENU / D.MENU (D. Menu / Top)
4 VCR	SHIFT + VIDEO 4 (Shift + 4)

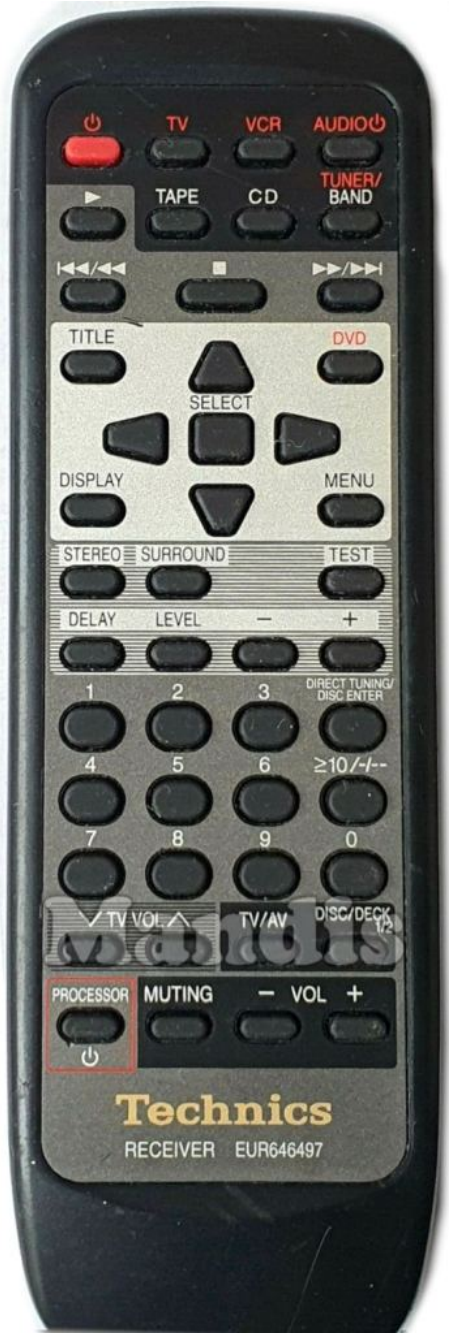

Original	Rechange
4 Tuner / Band	4
5 VCR	Shift + 5
5 Tuner / Band	5
6 VCR	Shift + 6
6 Tuner / Band	6
>10/ - / - - VCR	Shift + Guide / EPG / - / - -
>10/ - / - -	Guide / EPG / - / - -
7 VCR	Shift + 7
7 Tuner / Band	7
8 VCR	Shift + 8
8 Tuner / Band	8
9 VCR	Shift + 9
9 Tuner / Band	9
0 VCR	Shift + 0
0 Tuner / Band	0
Disc/Deck 1/2	Info / Angle
Muting	Mute / Dimmer

Original	Rechange
Vol -	Vol -
Vol +	Vol +