Mandis shop

Sony RM-PJ20

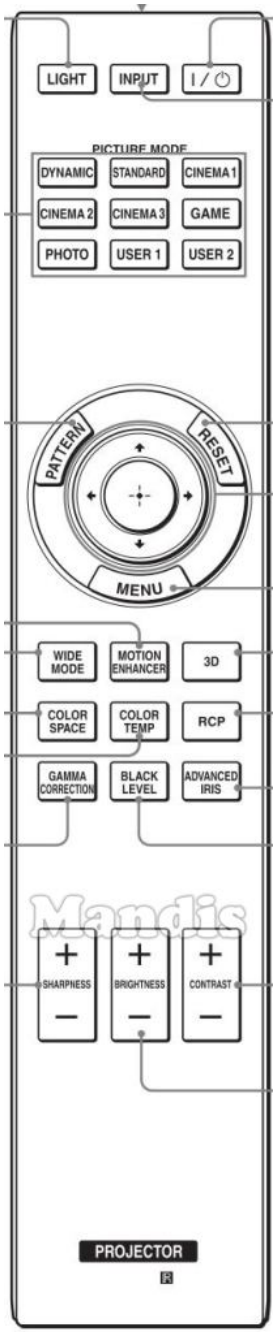

Original		Rechange	
INPUT	INPUT	RDS AV INPUT	AV / Input / RDS
I/⏻	POWER		Power
DYNAMIC	DYNAMIC	VIDEO 4	4
STANDARD	STANDARD	TAPE 5	5
CINEMA 1	CINEMA1	TV 1	1
CINEMA 2	CINEMA2	DVD 2	2
CINEMA 3	CINEMA3	CD-STB 3	3
GAME	GAME	TUNER 6	6
PHOTO	PHOTO	AUX-HDD 7	7
USER 1	USER1	USB 8	8
USER 2	USER2	BLUETOOTH 9	9
PATTERN	PATTERN	LIST SMART	Smart / List
↑	UP		Up
RESET	RESET	MEDIA DISPLAY	Display / Media
←	LEFT		Left
✦	OK	OK	OK
→	RIGHT		Right

Original		Rechange	
↓	DOWN		Down
MENU	MENU	HOME MENU	Menu / Home
WIDE MODE	WIDE MODE	SIZE ZOOM	Zoom / Size
MOTION ENHANCER	MOTION	PROGRAM TV/RADIO	TV/Radio /
3D	3D	SHIFT + CD-STB 3	Shift + 3
COLOR SPACE	COLOR SPACE	OPT-TOOLS SETUP	Setup / OPT /
COLOR TEMP	COLOR TEMP	FORMAT PICTURE	Picture / Format
RCP	RCP	TIMER SLEEP	Sleep / Timer
GAMMA CORRECTION	GAMMA	ANGLE INFO	Info / Angle
BLACK LEVEL	BLACK LEVEL	GOTO TEXT	Text / Goto
ADVANCED IRIS	ADVANCED IRIS	TOP MENU D.MENU	D.Menu / Top
+ SHARPNESS	SHARPNESS+	+ VOL	Vol +
+ BRIGHTNESS	BRIGHTNESS+	+ CH PAGE	CH+ / Page+
+ CONTRAST	CONTRAST+	PRESET+ ⏭	>>I / Preset+
SHARPNESS –	SHARPNESS-	VOL –	Vol -
BRIGHTNESS –	BRIGHTNESS-	CH PAGE –	CH- / Page-
CONTRAST –	CONTRAST-	PRESET- ⏮	I<< / Preset-

https://al-remotecontrols.fr/Sony/1036-1668-telecommande-remplacement-pour-Sony-RM-PJ20-148891.html